



The following figure is message list 1 screen. Other screens display the same marks.

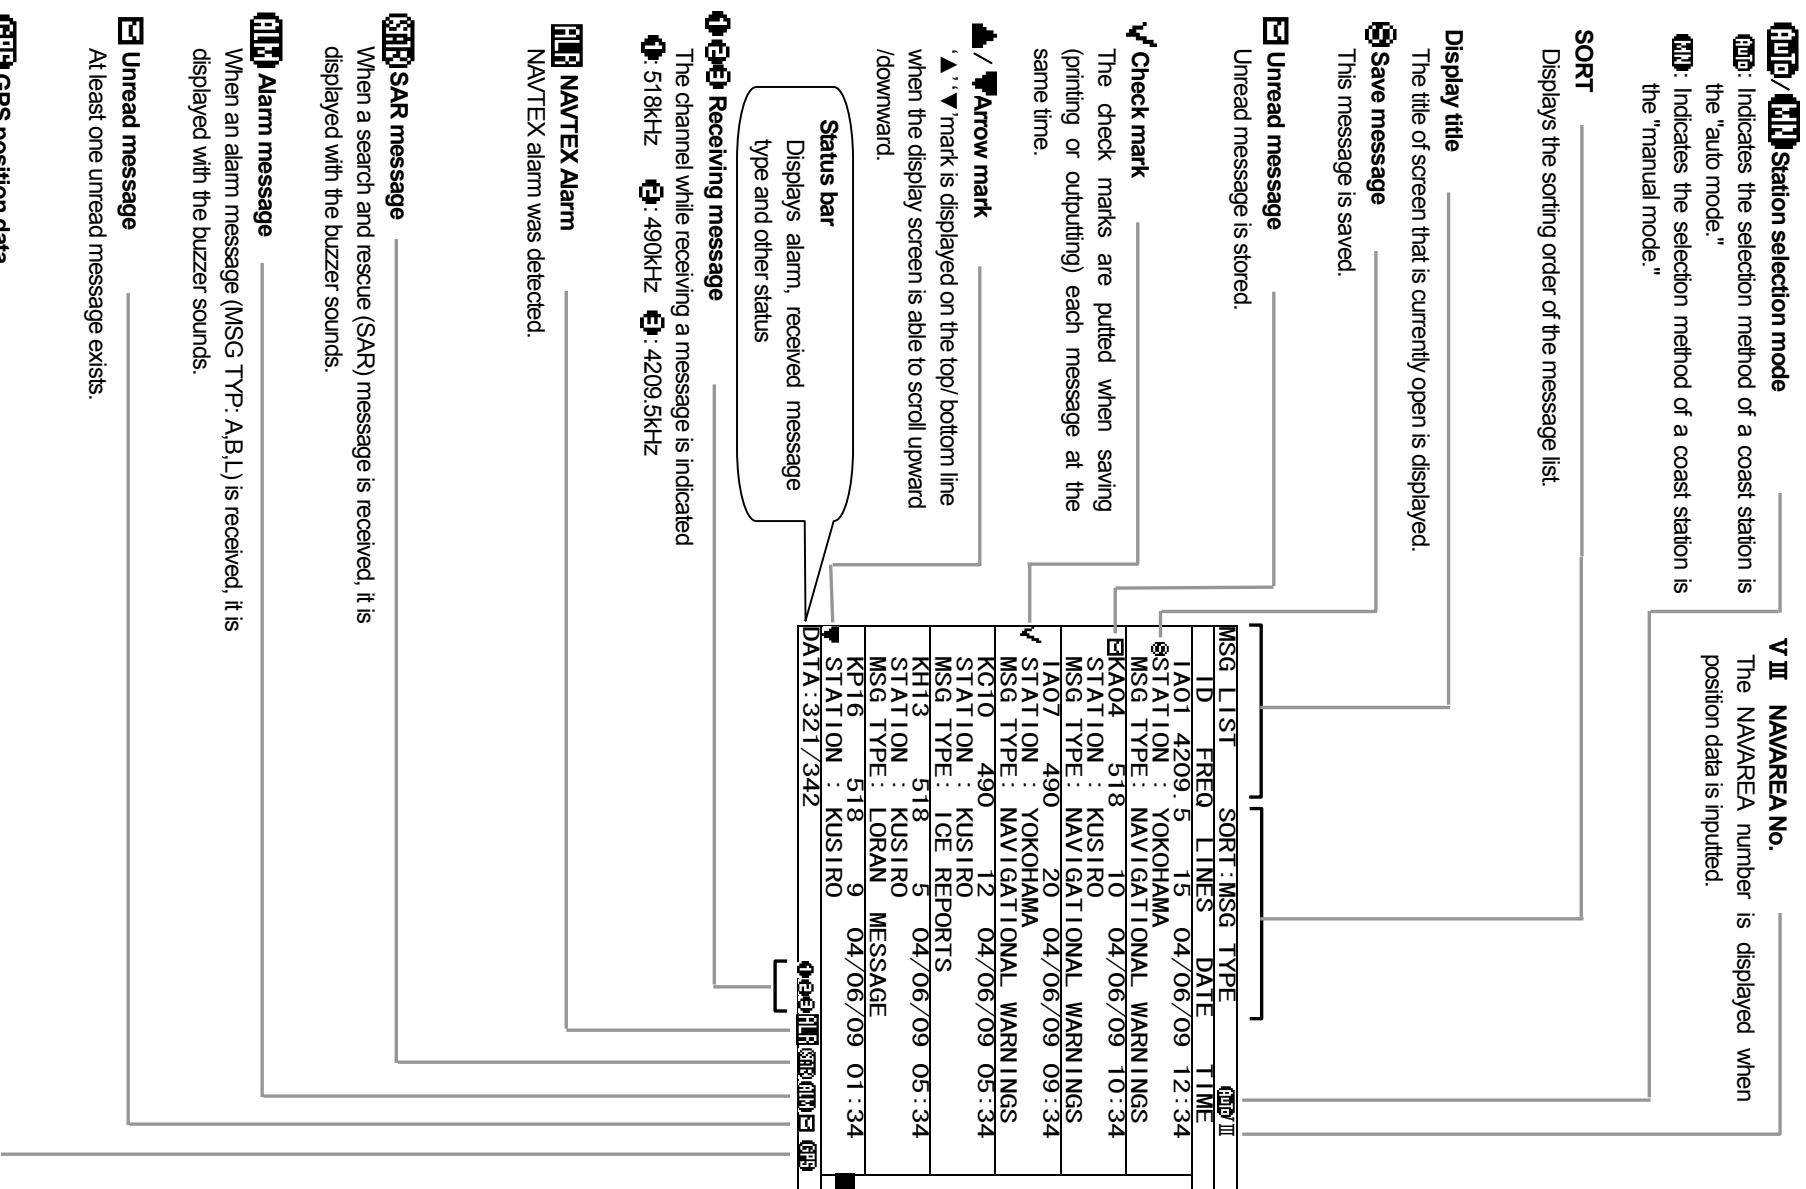

NCR-333 Operation Card

Message text screen : After equipment starts, the following screen appears.

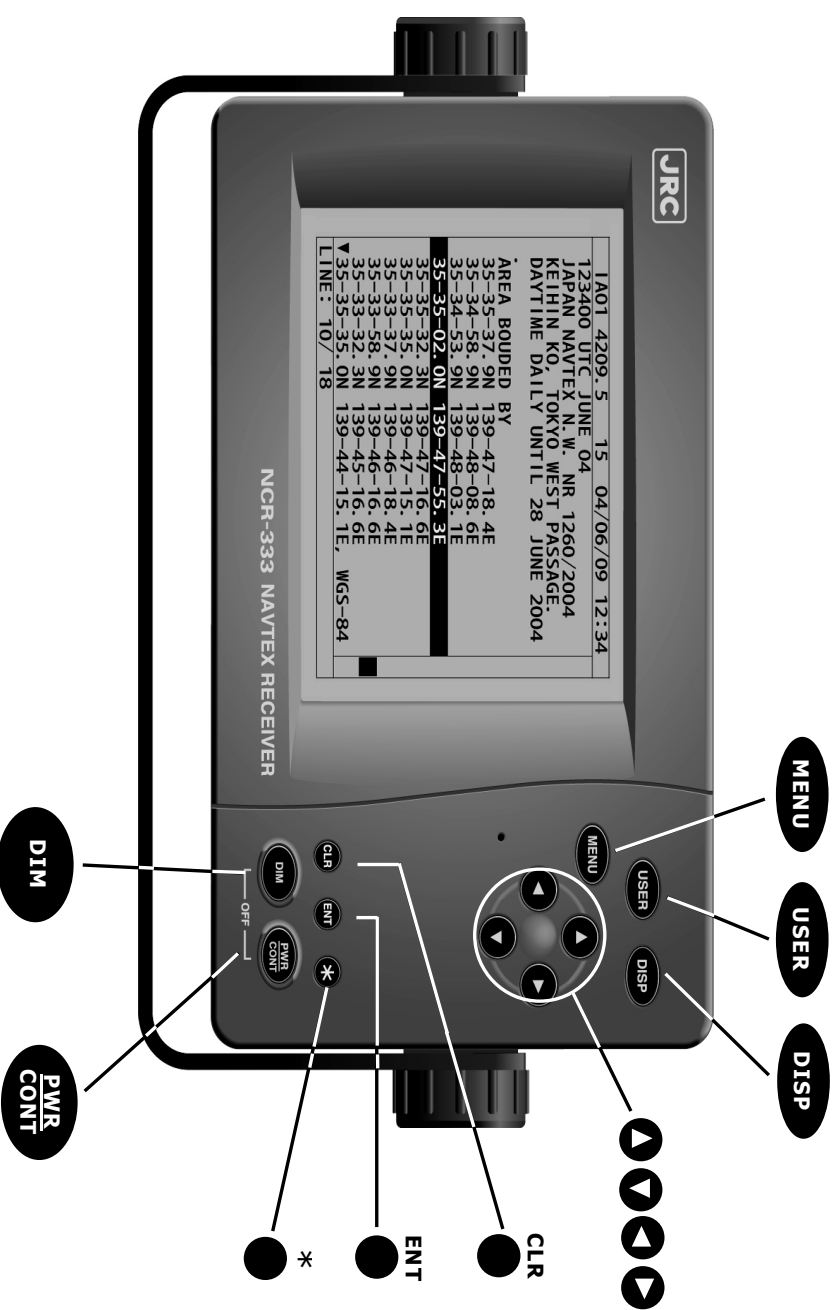


| | Explanation of keys |
|-----------------|---|
| MENU | MENU key Displays the "Main Menu". |
| USER | USER key Displays the screen assigned to this key. |
| DISP | DISP key Changes the display screen. |
| CLR | CLR key Clears input errors and cancel operations. |
| ENT | ENT key Turns off the buzzer sound. |
| * | * key Determines selection of an item and decides a setup. |
| DIM | DIM key Adjusts the back light brightness of the LCD. |
| PWR/CONT | PWR/CONT key Turns the power ON. Adjusts the contrast of the LCD when power is ON. |

The display of each screen:

To display each screen, press each key as follows. Moreover, in the following case, NAVTEX alarm and Message text screen are displayed automatically.


- After starting this equipment
- After receiving the message

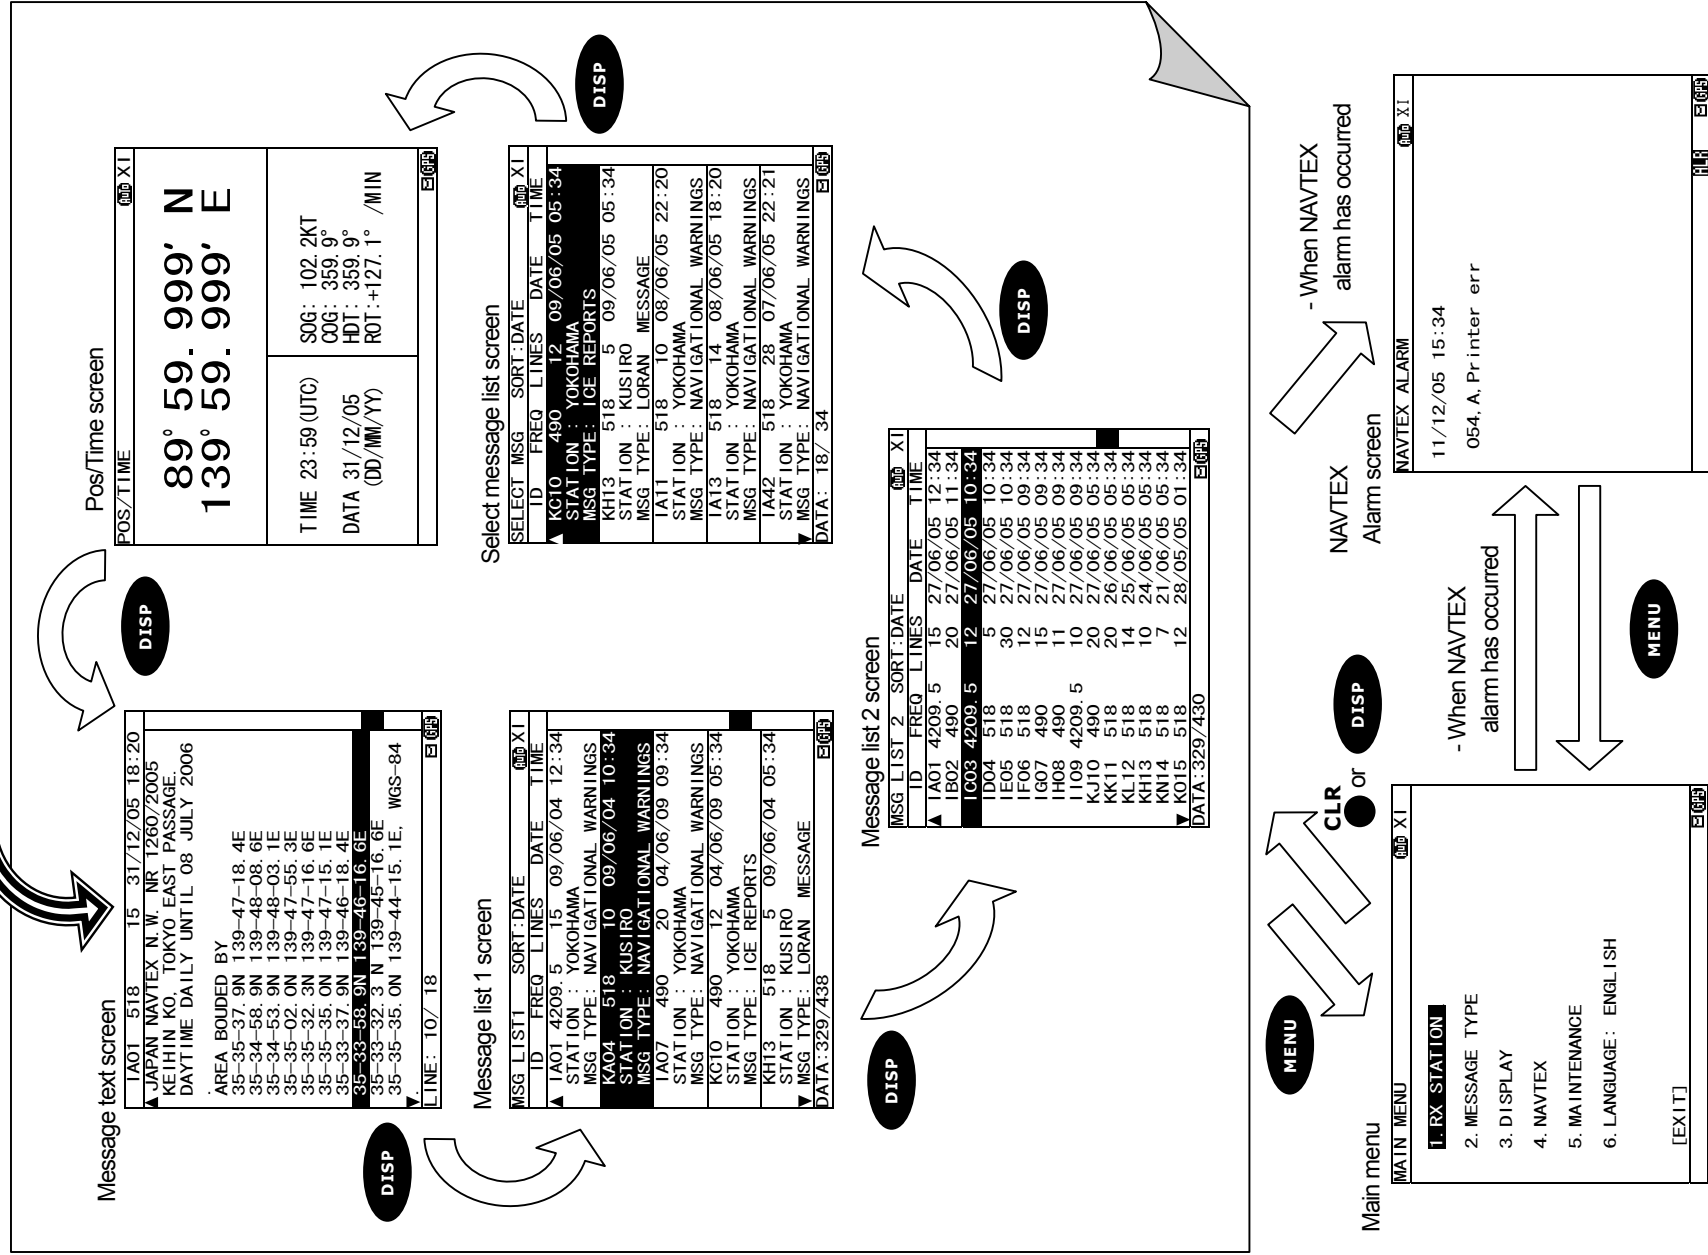


Receiving station (Message type) selection:

Select the receiving station and the message type of each channel. To Select the receiving station, select '1[RX STATION]' from MAIN MENU screen. To select the Message type, select '2[MESSAGE TYPE]' in MAIN MENU screen.

The example below shows the procedures to Select a receiving stations in the "MANUAL MODE SETTING".

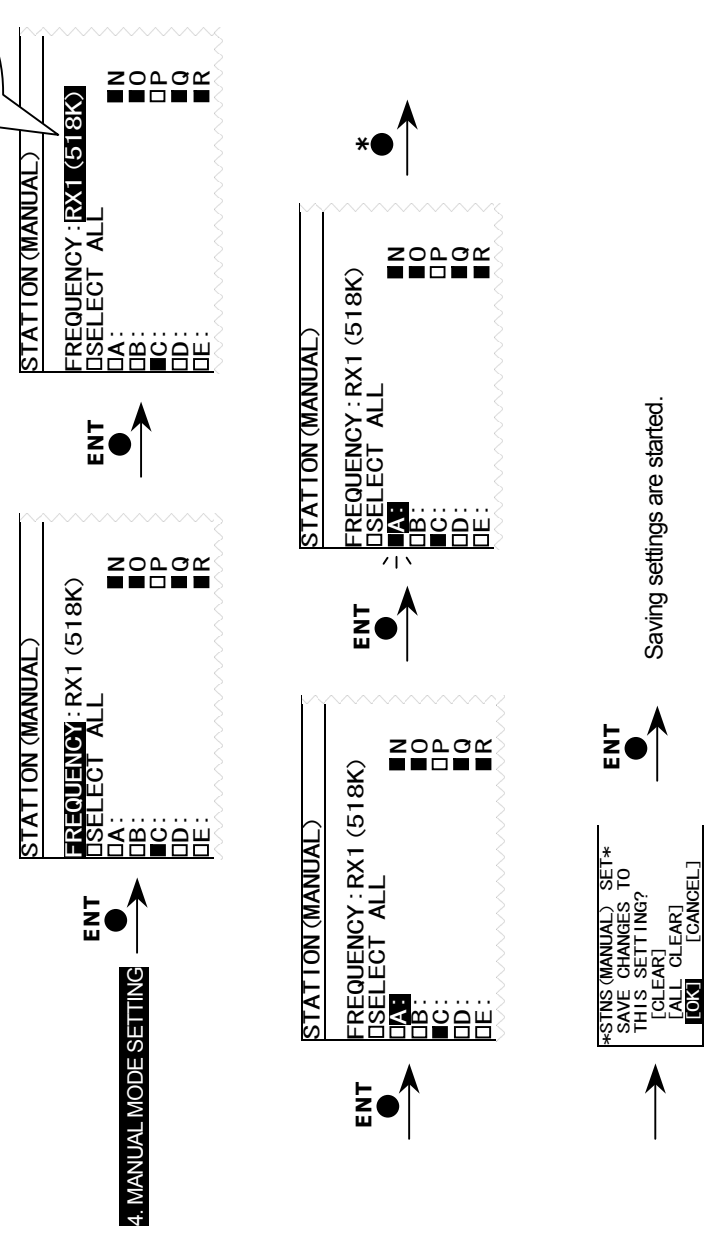

Save the message: 50 messages can be saved in each channel. In addition, the message that is not saved (the stored message) is automatically erased from the data memory about 70 hours after receiving.

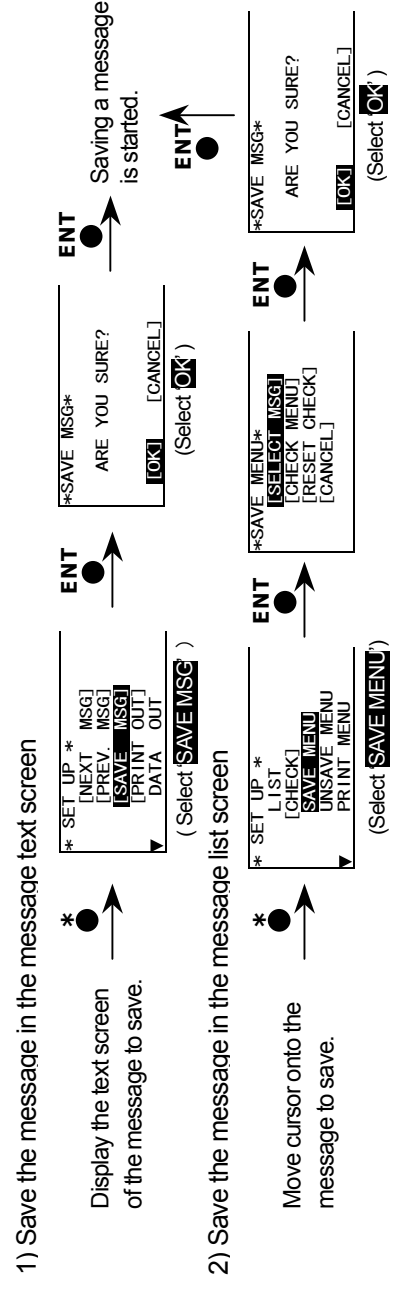

Unsave the message: The saved messages can be unsaved from the message list screen. In addition, when the message stored for 70 hours is deleted, the message is deleted also from the message list

