The following figure is message list 1 screen. Other screens display the same marks.



If E,M,N, or S is displayed next to " []]" ", it indicates that the external GPS position information is invalid.





	Explanatio
MENU	MENU key Displays the "Main Menu".
USER	USER key Displays the screen assigned to this k
DISP	DISP key Changes the display screen.
	Up, Down, Left, Right key Moves the cursor, scrolls the display s
	<u>CLR key</u> Clears input errors and cancel operat Turns off the buzzer sound.
ENT	ENT key Determines selection of an item and o
●	<u> key</u> Displays the small window (the sub se
DIM	DIM key Adjusts the back light brightness of the
PWR CONT	<u>PWR/CONT key</u> Turns the power ON. Adjusts the cont

Message text screen : After equipment starts, the following screen appears.





— iii —