


JUE-60GX Operation Guide

 
1 BDE power on and satellite acquisition

1 Set the BDE power switch to on.


The LED indicators on the front side lights in the following sequence:

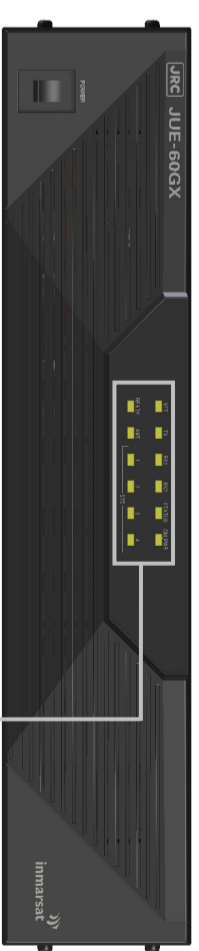


BDE power switch on




Starting boot loader

 


Starting OS

 

 Completed OS start, starting core module (CM)



Completed CM start

 

To satellite search status

How to read the LED panel

NET	TX	RX1	RX2	STATUS	CM
READY	ANT	STS1	STS2	STS3	STS4

■ Green On ■ Red On ■ Yellow On
◻ Green Blink ◻ Red Blink ■ Off
 Undecided


The shapes and precise colors of LED are different from the actual shapes and colors.

Notes

- When the LED indication is different from any of the above, an error is assumed. For error indications and the meanings, refer to "Appendix F.1" and for error handling procedures, refer to "Appendix E".
- Even if a large sound is emitted from ADE at power on, this does not mean a fault.

2 The automatic satellite search (acquisition) function operates.

- JUE-60GX calculates the satellite position from the current position information that was measured by GPS, automatically directs the antenna to the satellite direction, and acquires the satellite.
- After acquisition, the antenna direction angle is automatically controlled so that the received wave strength becomes the maximum.
- The LED indication at the front switches in the following sequence.

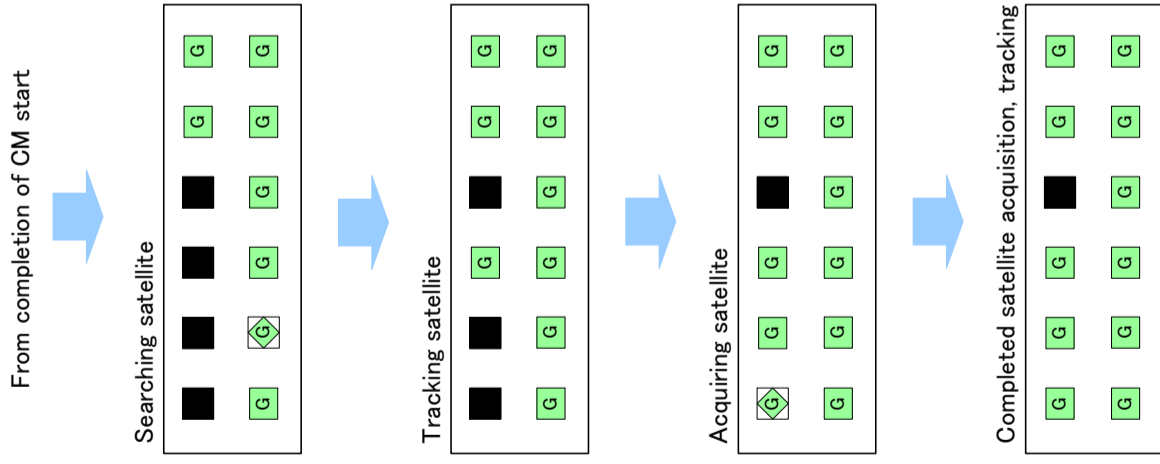

This will make the JUE-60GX service available.


Notes

- When the LED indication is different from any of the above, an error is assumed. For error indications and the meanings, refer to "F.1" and for error handling procedures, refer to "Appendix E".
- When the satellite search function fails, please consult with your distributor or JRC sales office.

2 BDE power off

Turn off the power switch.

READY LED starts blinking in red and power disconnection processing is executed during this time. At completion of power disconnection processing, all the LED indicators go off and the power is turned off.

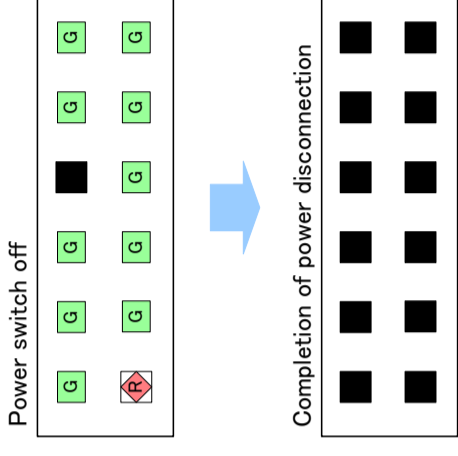

CAUTION



Do not unplug the power cable while power disconnection is in progress.

Not use the asbestos