



ALPHATRON
Marine



Anemometer

WS-12

Operation & Installation Manual

www.jrc.am

Contents

I Preface.....	3
1 Revision History.....	3
1 Introduction.....	4
2 Installation.....	5
2.1 Installation of wind sensor.....	5
3 Calibration.....	6
4 Function and Operation.....	7
5 Specification.....	8
6 Maintenance.....	9
7 Dimensional drawing.....	10
8 Appendix.....	11



I Preface

Please read this manual before installation and operation of the equipment.

1 Revision History

Version	Description	Date
V1.0	First release	24 - October - 2018

Table 1: Revision history

1 Introduction

The Marine Anemometer WS-12 is an instrument for wind speed and direction. It can measure relative wind speed (accuracy $\pm 5\%$, min 0.1m/s), relative wind direction (accuracy 1°).

The WS-12 wind sensor must be reading representative values for the wind and therefore the wind sensor must be reading clear wind, unobstructed by any wind shadow from structures.

System composition

Wind speed sensor	Wind speed sensor has a rotor with three wind cups.
Wind direction sensor	Wind direction sensor has a wind vane to drive an absolute angle sensor unit.
Holder	Used to install wind speed sensor and direction sensor for fixation of junction box.

Table 2: Sensor WS-12

Principle of measurement

The wind speed sensor has a rotor with three wind cups which spins as the wind moves past the boat. The Wind speed sensor measures how fast the rotor is spinning to calculate the wind speed.

The wind direction sensor has a wind vane which points in the direction that the wind is coming from. The wind direction sensor electronically senses the direction the wind vane is pointing.

2 Installation

Installation of wind sensor WS-12.

2.1 Installation of wind sensor

The Wind sensor WS-12 should be installed in a place with free wind in the ship. The mounting holder has a diameter of 25~40mm and an active radius of 350mm. After finishing the installation of the main unit and the sensor, please make the calibration.

Note a big radar antenna rotation can disturb the wind measurement. Find a location away from the radar.

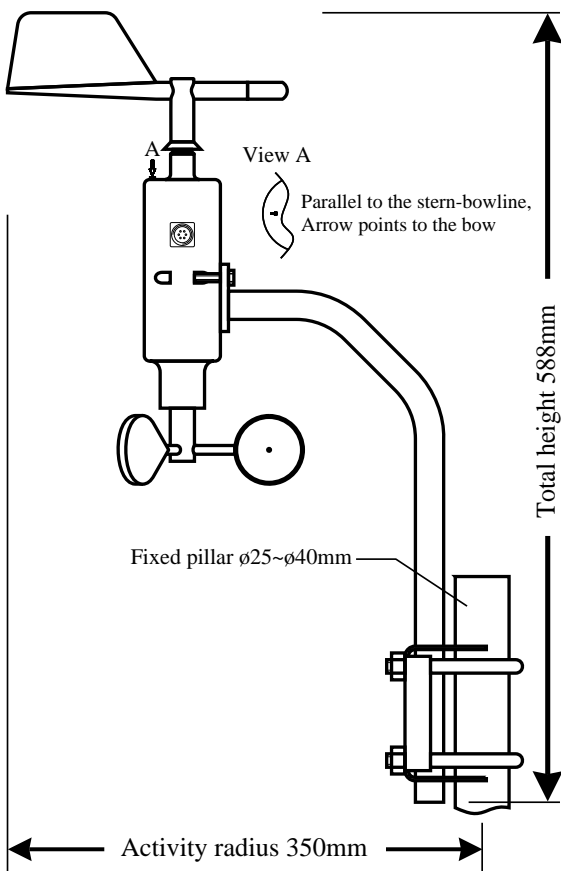


Figure 1: Installation of anemometer

Connect the wind sensor with the 5-pole connector on the delivered 25m cable. Cut the 4-pole connector and connect the wires to a NMEA input of the AlphaWind repeater and the 24Vdc.

Connector Anemometer	Connection	Purpose	Connection equipment side
	1	+TxD	4 (white)
	2	-0Vdc	2 (black)
	4	-TxD	3 (blue)
	5	+24Vdc	1 (red)

Table 3: Cable connection

3 Calibration

There is no possibility of calibration the wind sensor other than by installation, make sure the red arrow on the wind sensor is parallel to the stern-bow line of the ship.



4 Function and Operation

The output of the WS-12 is the NMEA sentence MWV. Below is the specifications of this sentence.

Data transmission is according to NMEA0183 standard.

Main Unit Output --MWV

\$--MWV, x.x , a , x.x , a , A*hh<CR><LF>

① ② ③ ④ ⑤ ⑥

1. Wind angle, 0 to 359 degrees
2. Reference, R = Relative, T = True
3. Wind Speed
4. Wind Speed Units, K=km/h / M=m/s / N=knots
5. Status, A = Data Valid, V = Data invalid
6. Checksum

5 Specification

Power Supply	24 Vdc (20-32 V)
NMEA Baud rate	4800 bps
Data	RS422 with NMEA0183 Standard
Dimensions	Height: 588mm, Activity radius 350mm
Weight	8 kg

Table 4: Basic specifications

Working Temperature	-20°C ~ +85°C
Storage Temperature	-20°C ~ +85°C
Humidity	10% ~ 100% RH
Protection	IP56

Table 5: Environmental conditions

Wind Speed Range	0 ~ 60m/s
Wind Speed Accuracy	±5% (min. 0.1m/s)
Wind Direction Range	0 ~ 359°
Wind Direction Accuracy	± 1°
Min. Start speed	≤ 0.5m/s

Table 6: Technical specifications




6 Maintenance

Ice or dirt on the sensor will disturb the normal working of the sensor. Please clear the sensor from ice and dirt in time.

Regularly check the external mounting bolts to avoid looseness and the abrasion and ageing of the cables.

When the equipment breaks down, contact an Alpatron Marine service engineer in time. Please do not do the service yourself.

7 Dimensional drawing

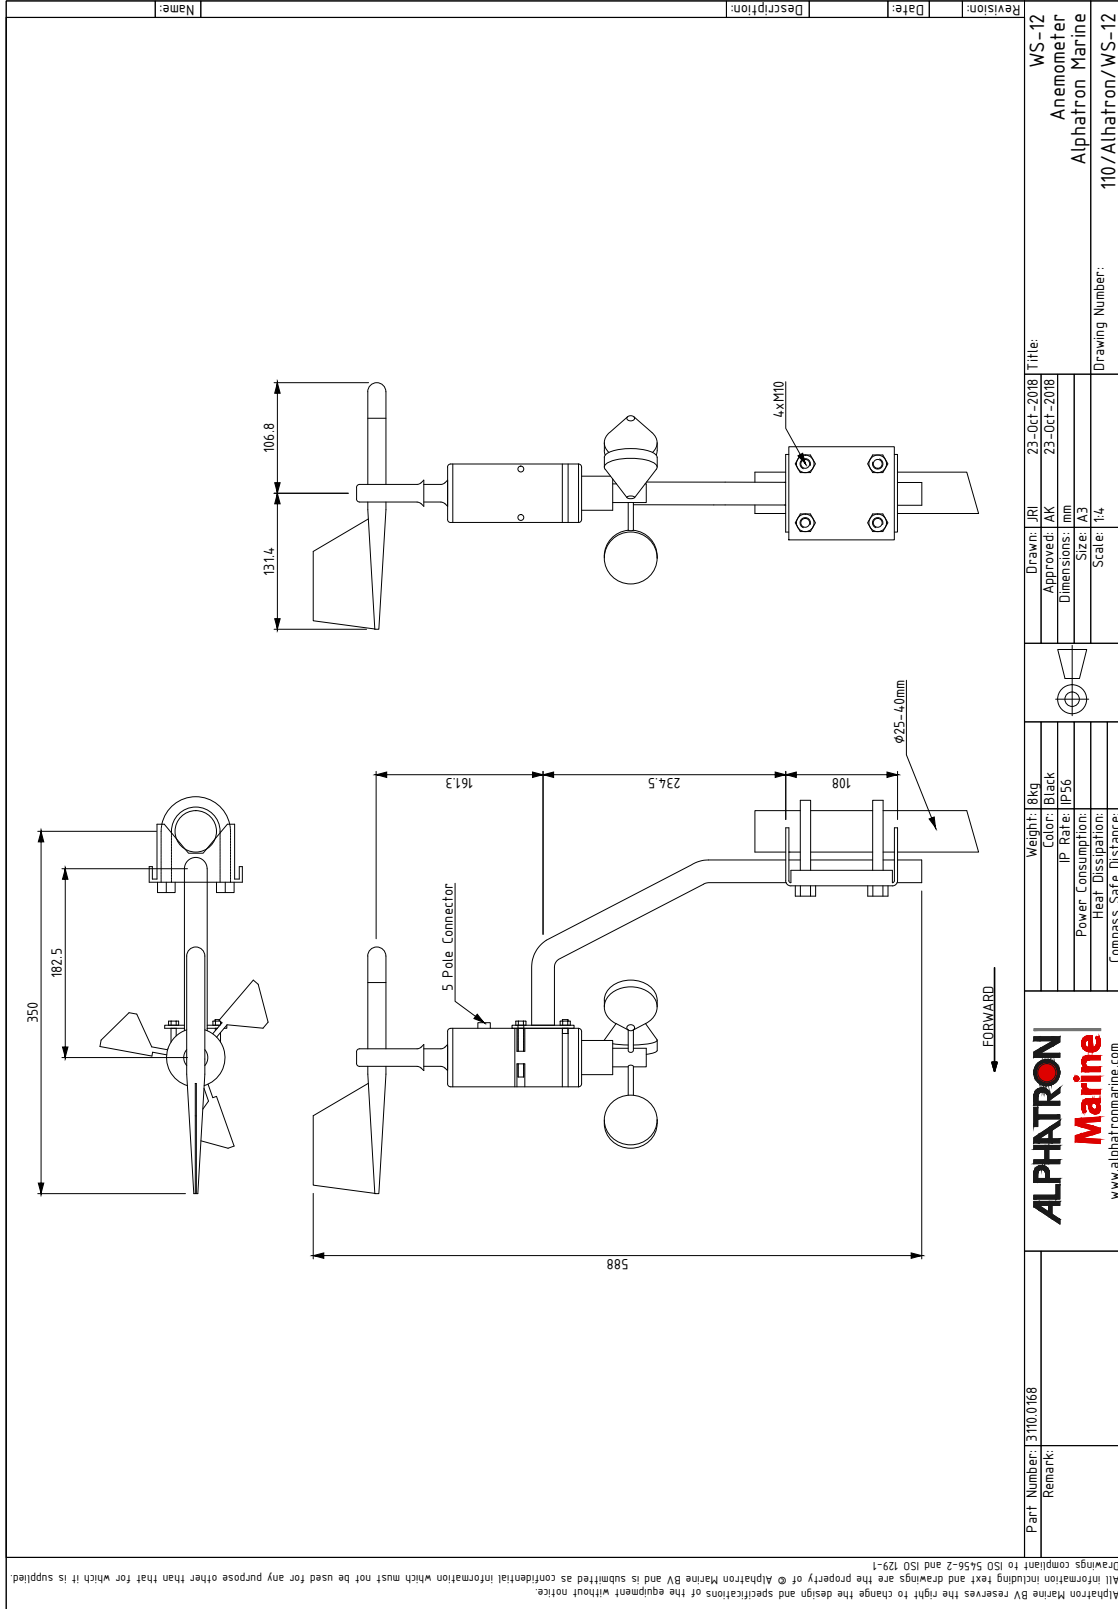

8 Appendix

Grade	Speed (m/s)	Speed (km/h)
0	0.0 ~ 0.2	<1
1	0.0 ~ 0.2	1 ~ 5
2	0.3 ~ 1.5	6 ~ 11
3	3.4 ~ 5.4	12 ~ 19
4	5.5 ~ 7.9	20 ~ 28
5	8.0 ~ 10.7	29 ~ 38
6	10.8 ~ 13.8	39 ~ 49
7	13.9 ~ 17.1	50 ~ 61
8	17.2 ~ 20.7	62 ~ 74
9	20.8 ~ 24.4	75 ~ 88
10	24.5 ~ 28.4	89 ~ 102
11	28.5 ~ 32.6	103 ~ 117
12	32.7 ~ 36.9	118 ~ 133
13	37.0 ~ 41.4	134 ~ 149
14	41.5 ~ 46.1	150 ~ 166
15	46.2 ~ 50.9	167 ~ 183
16	51.0 ~ 56.0	184 ~ 201
17	56.1 ~ 61.2	202 ~ 220
>17	≥61.3	≥221

Table 7: Wind grade table

All over the world,
close to the customer

JRC/Alphatron Marine B.V.

Schaardijk 23 (harbor 115)
3063 NH Rotterdam
The Netherlands
T +31 10 453 4000
F +31 10 453 4010
service@jrc.am
www.jrc.am

The information in this document is subject to change without notice and does not represent a commitment on the part of Alphatron Marine B.V.

Document name : Anemometer
Document nr. : 1023_2
Version : V1.0
© All rights reserved Alphatron Marine B.V.

Centers of Excellence

Houston, Rotterdam, Singapore, Tokyo